


BRP-Powertrain
MAINTENANCE MANUAL

Graphic

Inspecting the magnetic plug.

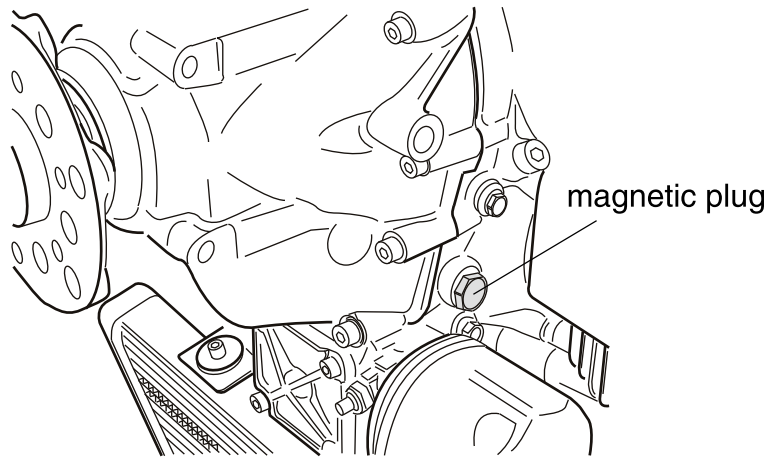

acceptable

not acceptable

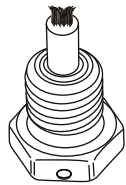


Fig. 28

08565,08566,08564,08563

12.1) Installation of the magnetic plug

Install

The following steps are necessary:

Step	Procedure
1	Clean the magnetic plug.
2	Refit the magnetic plug. Tightening torque 25 Nm (18.5 ft.lb).
3	Safety wire the plug.

Inspect all system for correct function. Detailed inspection of affected engine components.